

26325 USB-C bukhead with USB-C connector compatibility Chart

Housing	accessory port	Adaptor	Batteries support in camera charge and Power Delivery	External Power bank and cable requirement	remarks
NA-Z8	front M16	/	EN-EL15c or EN-EL15b		1. Turn off camera to charge the battery, 2. M16 for USB-C bukhead and M24 for HDMI output
NA-Z7II	front M28	25080 M28-M16 Step Down Adaptor			
NA-A7SIII	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	NP-FZ100	1. USB-PD Powerbank with USB-C output 9V3A/9V2A, 2. a USB cable with Type C connectors at both ends. *Canon R5 requiries 9V3A power to turn on the camera, and 9V2A can charge the battery only.	1.Turn off camera to charge the battery, 2. M28/M24 Support either USB-C bukhead or HDMI output
NA-A1	front M24	26326 M24-M16 Step Down Adaptor to use with 26325			
NA-A7IV	front M24	26326 M24-M16 Step Down Adaptor to use with 26325			
NA-A7RV	front M24	26326 M24-M16 Step Down Adaptor to use with 26325			
NA-A2020	front M24	26326 M24-M16 Step Down Adaptor to use with 26325			
NA-FX3	front M16	/			1. Turn off camera to charge the battery, 2. M16 for USB-C bukhead and M24 for HDMI output
NA-ZVE1	front M24	26326 M24-M16 Step Down Adaptor to use with 26325			1. Turn off camera to charge the battery, 2. M24 support either USB-C bukhead or HDMI output
NA-R5	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	LP-E6NH or LP-E6N		1.Turn off camera to charge the battery, 2. M28/M24 Support either USB-C bukhead or HDMI output
NA-R7	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	LP-E6NH or LP-E6N		
NA-R6II	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	LP-E6NH or LP-E6N		
NA-GH6	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	DMW-BLK22		
NA-S5II	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	DMW-BLK22		
NA-OM1	front M24	26326 M24-M16 Step Down Adaptor to use with 26325	BLX-1		

